

PERFORATED WINDOW FILM

Applying your Perforated Window Film from INDUSTRYimages is easy. No glue, water, or messy clean-up is involved, and Perforated Window Film is easily removed from any glass surfaces with no unsightly residue or damage left behind.

INSTALLATION

This Product is intended to be applied to the outside of the window (side from which you'd like to view the image).

Prior to mounting, ensure the window is clean, dry and free of debris.

Place the decal on a flat surface, face-down and gently peel approximately 12" the backing away from the top edge of the decal.

Cut the excess backing off with scissors.

See *figure 1*

Position the decal in the desired location on the window, while being careful not to allow contact with the 12" of exposed adhesive.

Gradually and gently apply the top 12" of the film to your window beginning in the centre, just above the remaining backing, and working your way out.

See *figure 2*

Once the top 12" is securely adhered to your window, remove the remaining backing in a downward motion while applying gentle pressure to the decal, working your way towards the bottom of the decal in a semi-circular motion from the centre out, while being careful not to stretch the vinyl.

See *Figure 3*

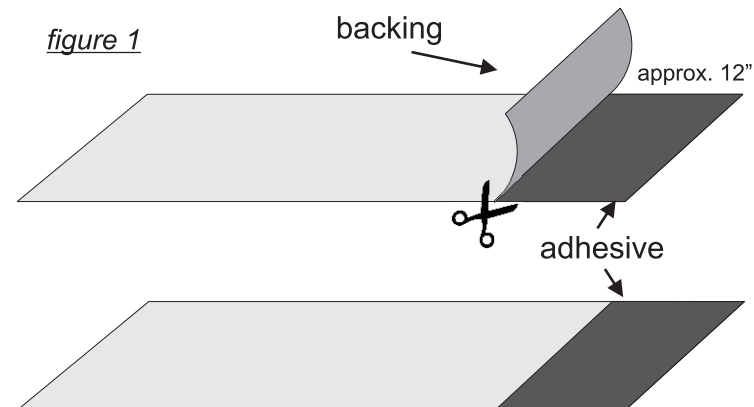


figure 2


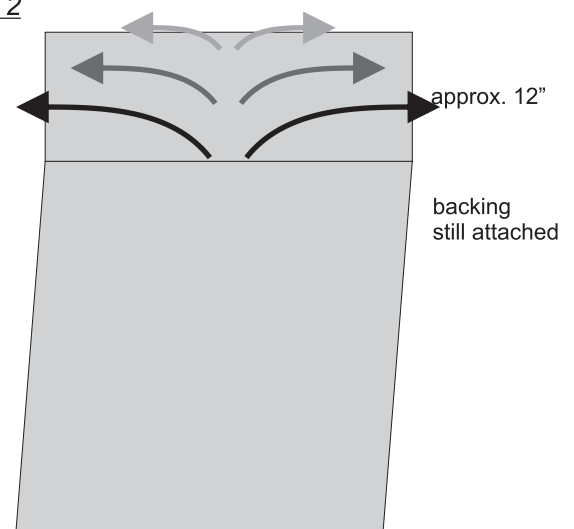


figure 3

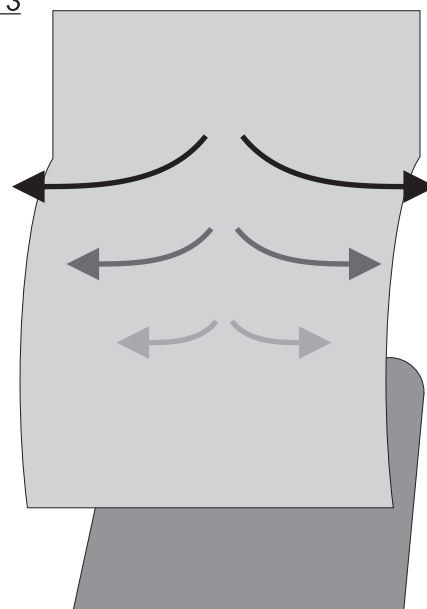

>> To avoid wrinkles, be careful not to allow the adhesive to make contact with window other than while applying pressure in semi-circular motion.

>> Two people are recommended for the installation of large window films (2'x2' and over).

>> For long-term use, professional installation and a clear protective over-laminate are recommended.